



MOUNTING TEMPLATE
For installing a Keypad/ProxReader
to the OUTSIDE of door

- Use this template with fire-rated metal doors or solid wood doors
- For use with Mortise Locks
- For use with a *Surface-Mounted Networkx Control Module* ("Backbox")
- Use on OUTSIDE of door

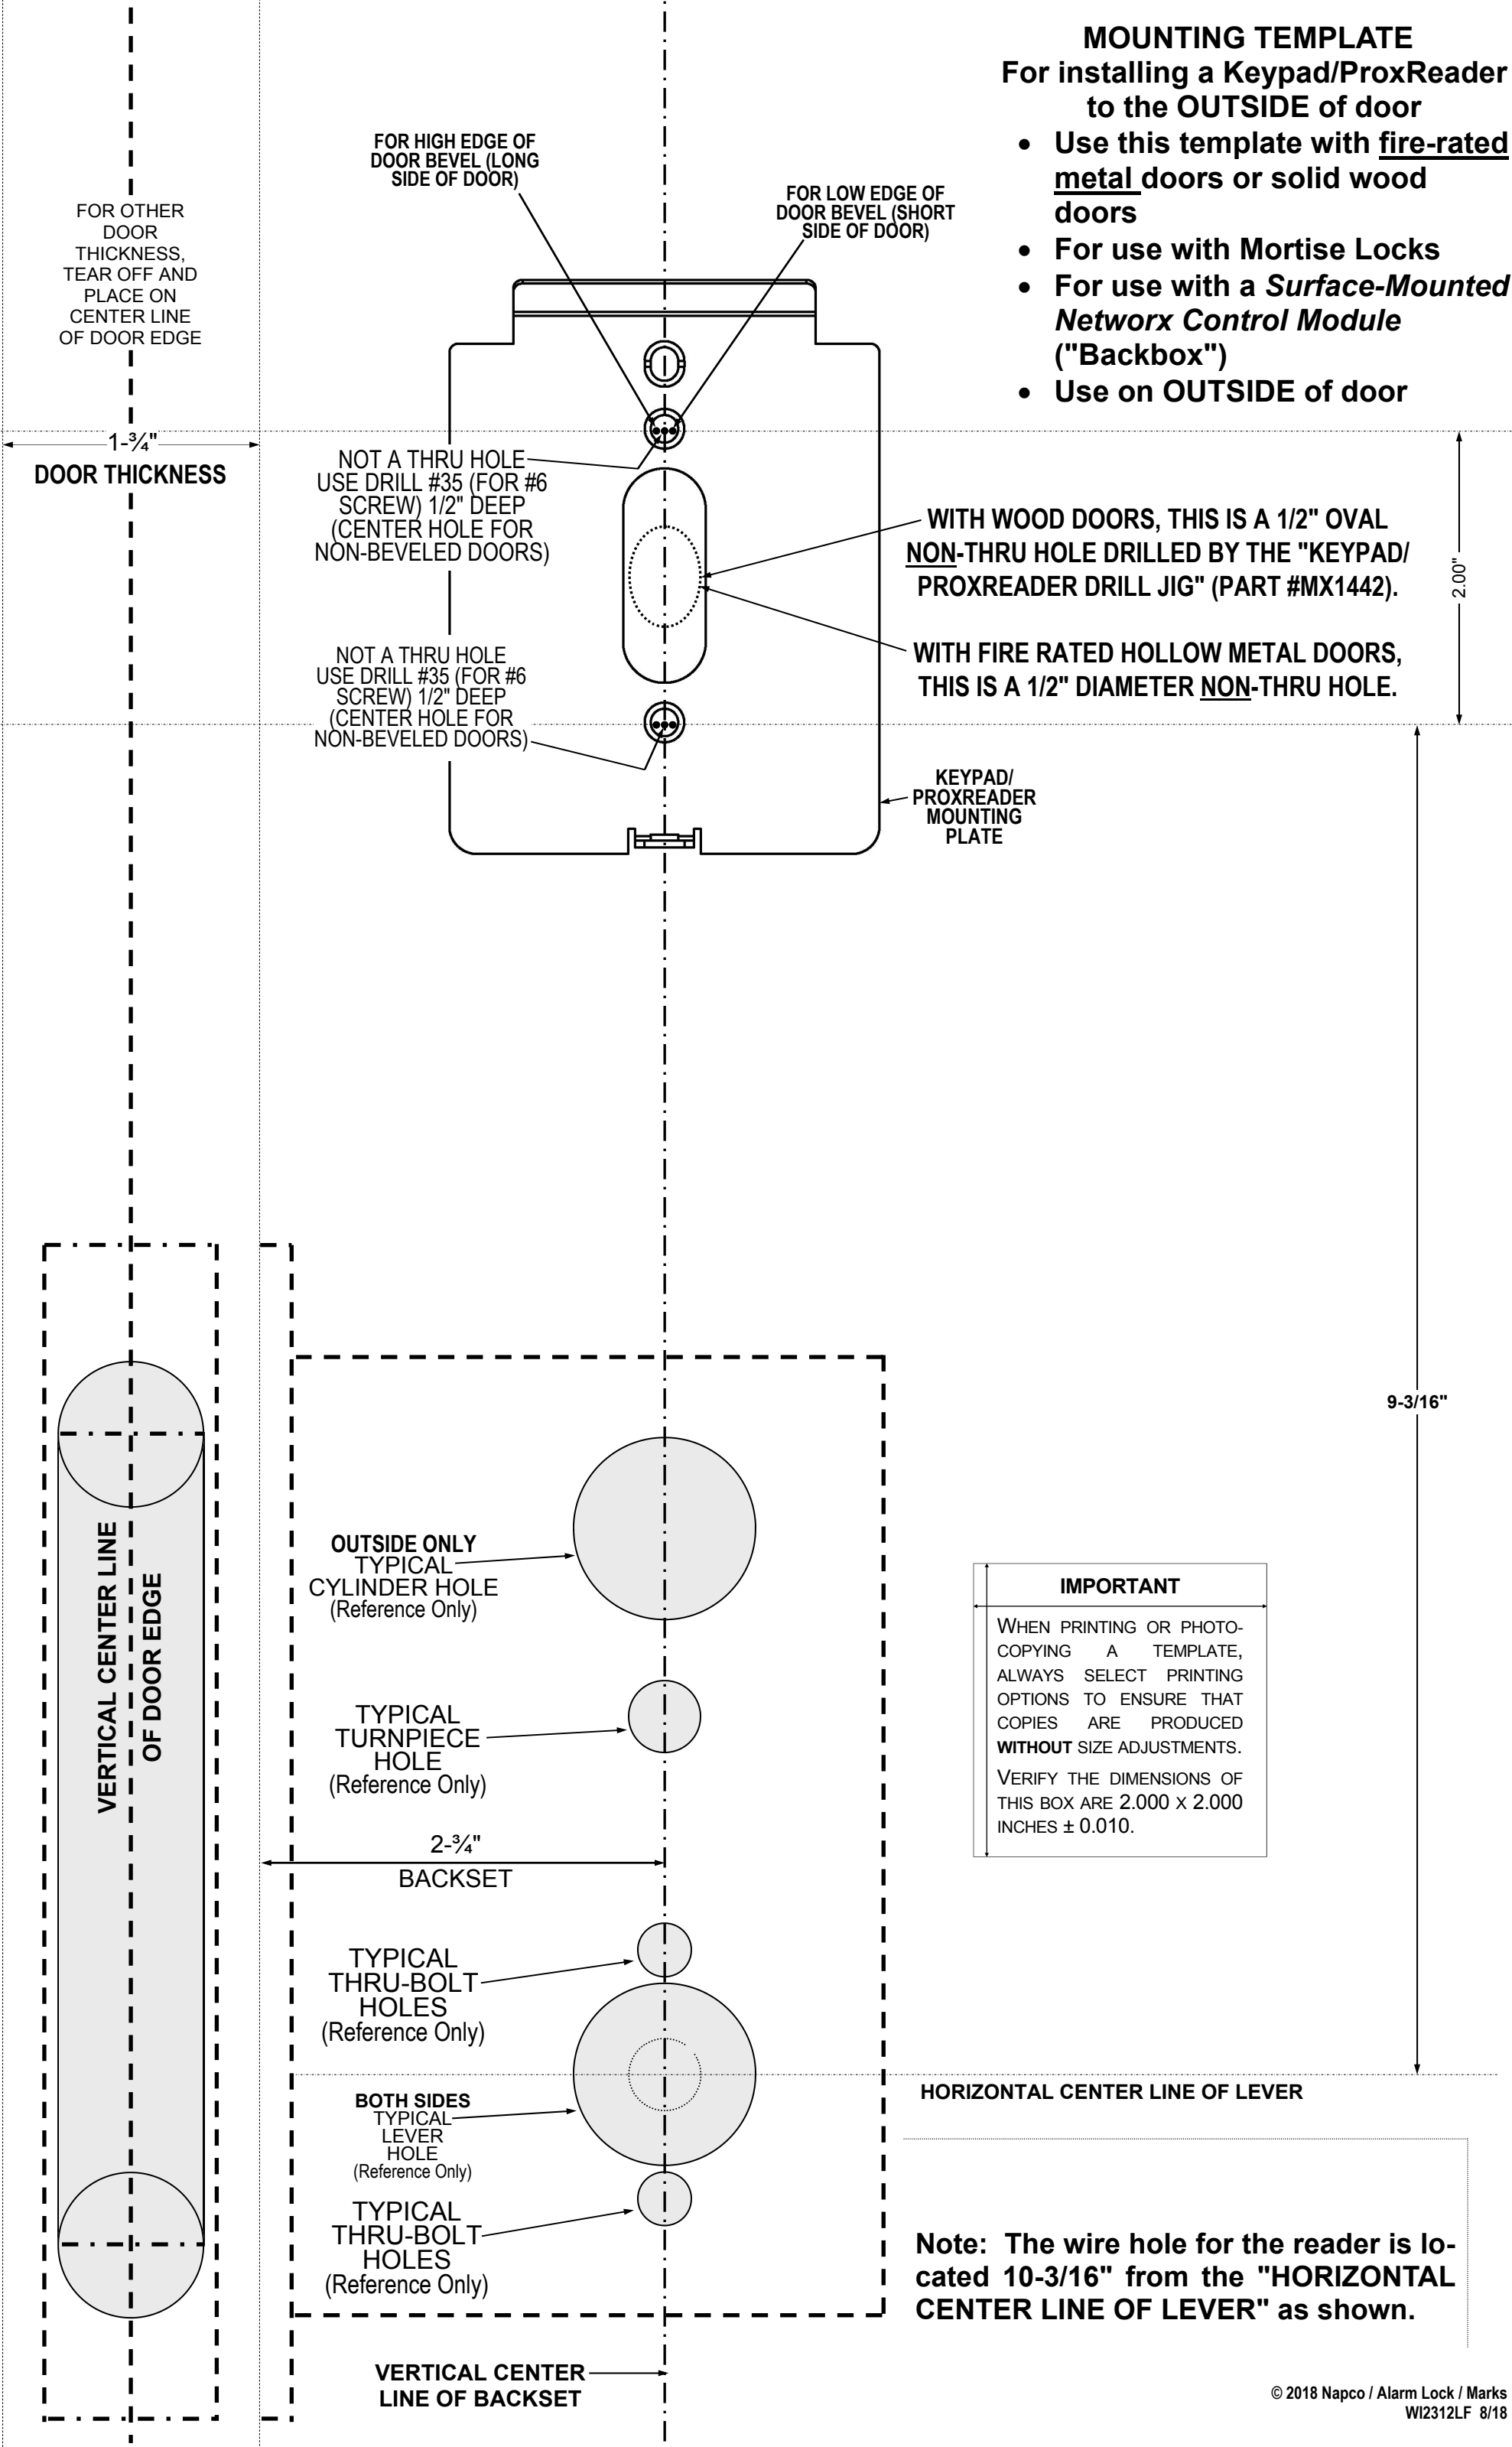

MOUNTING TEMPLATE
For installing a Keypad/ProxReader
to the **OUTSIDE** of door

- Use this template with fire-rated metal doors or solid wood doors
- For use with Mortise Locks
- For use with a *Surface-Mounted Networx Control Module* ("Backbox")
- Use on **OUTSIDE** of door

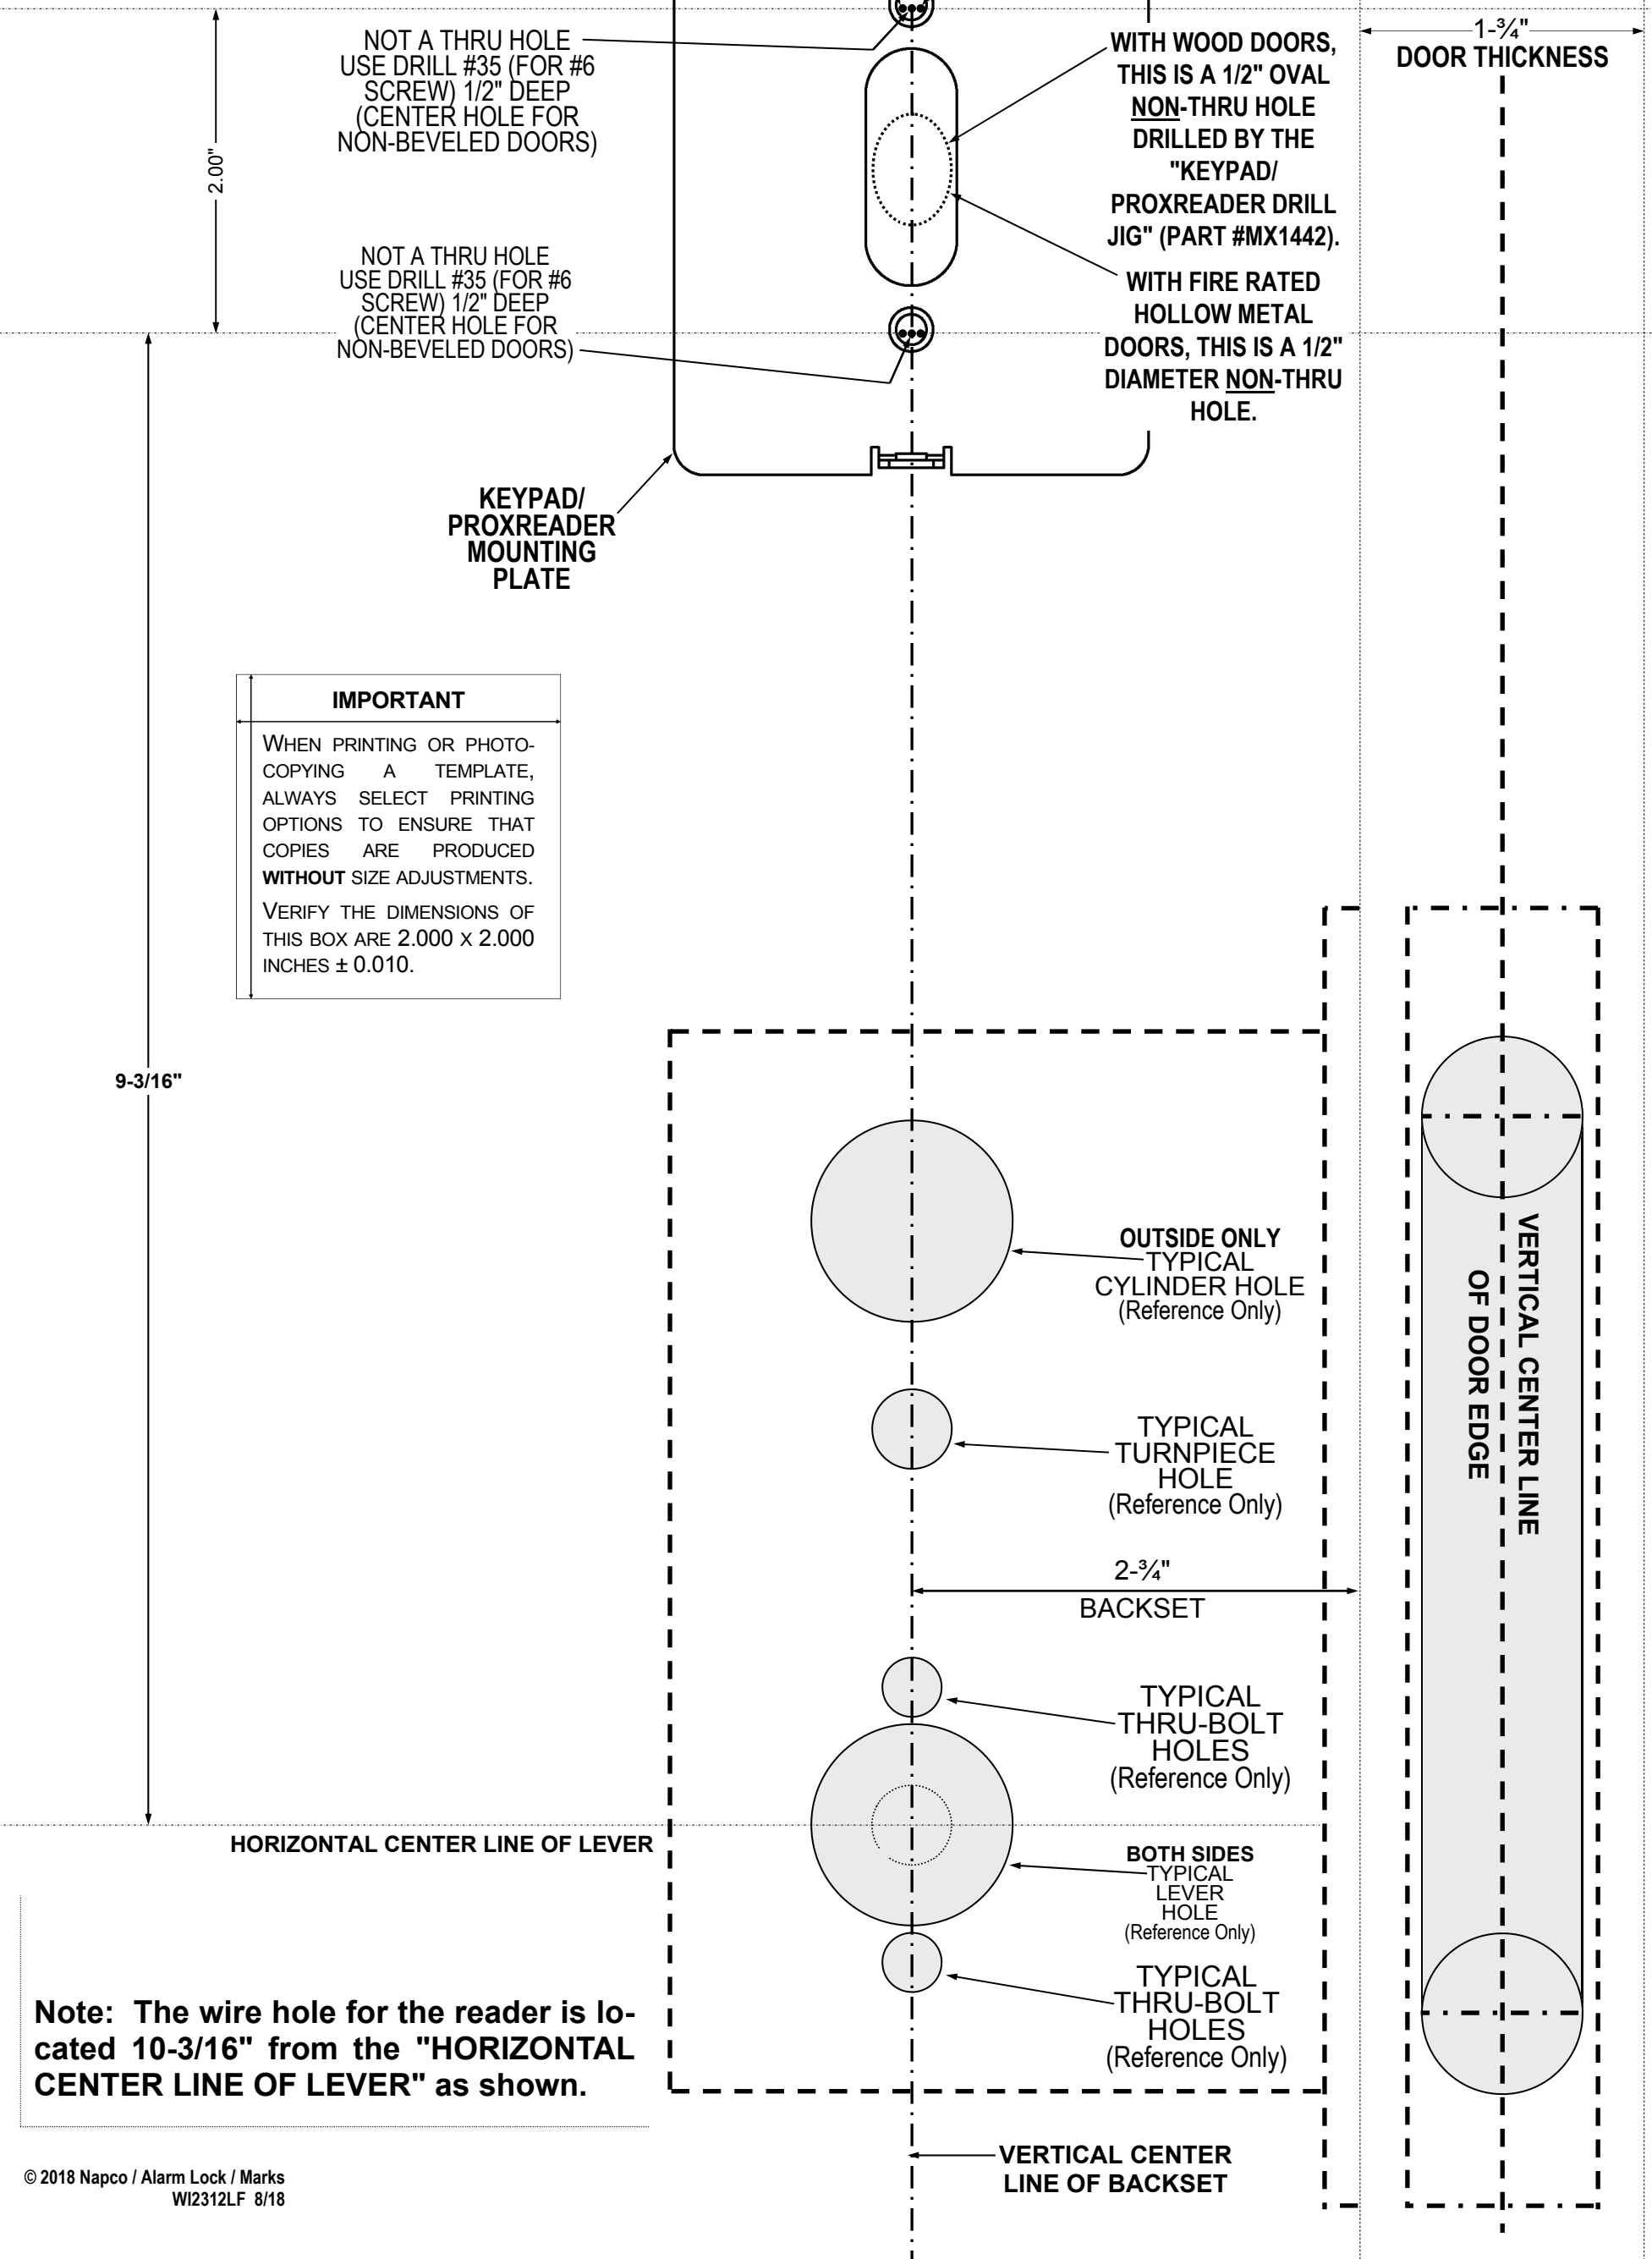

Note: The wire hole for the reader is located 10-3/16" from the "HORIZONTAL CENTER LINE OF LEVER" as shown.