


MOUNTING TEMPLATE
For installing a Keypad/ProxReader
to the OUTSIDE of door

- Use this template with fire-rated metal doors or solid wood doors
- For use with Mortise Locks
- For use with a *Mortised Networkx Control Module*
- Use on OUTSIDE of door

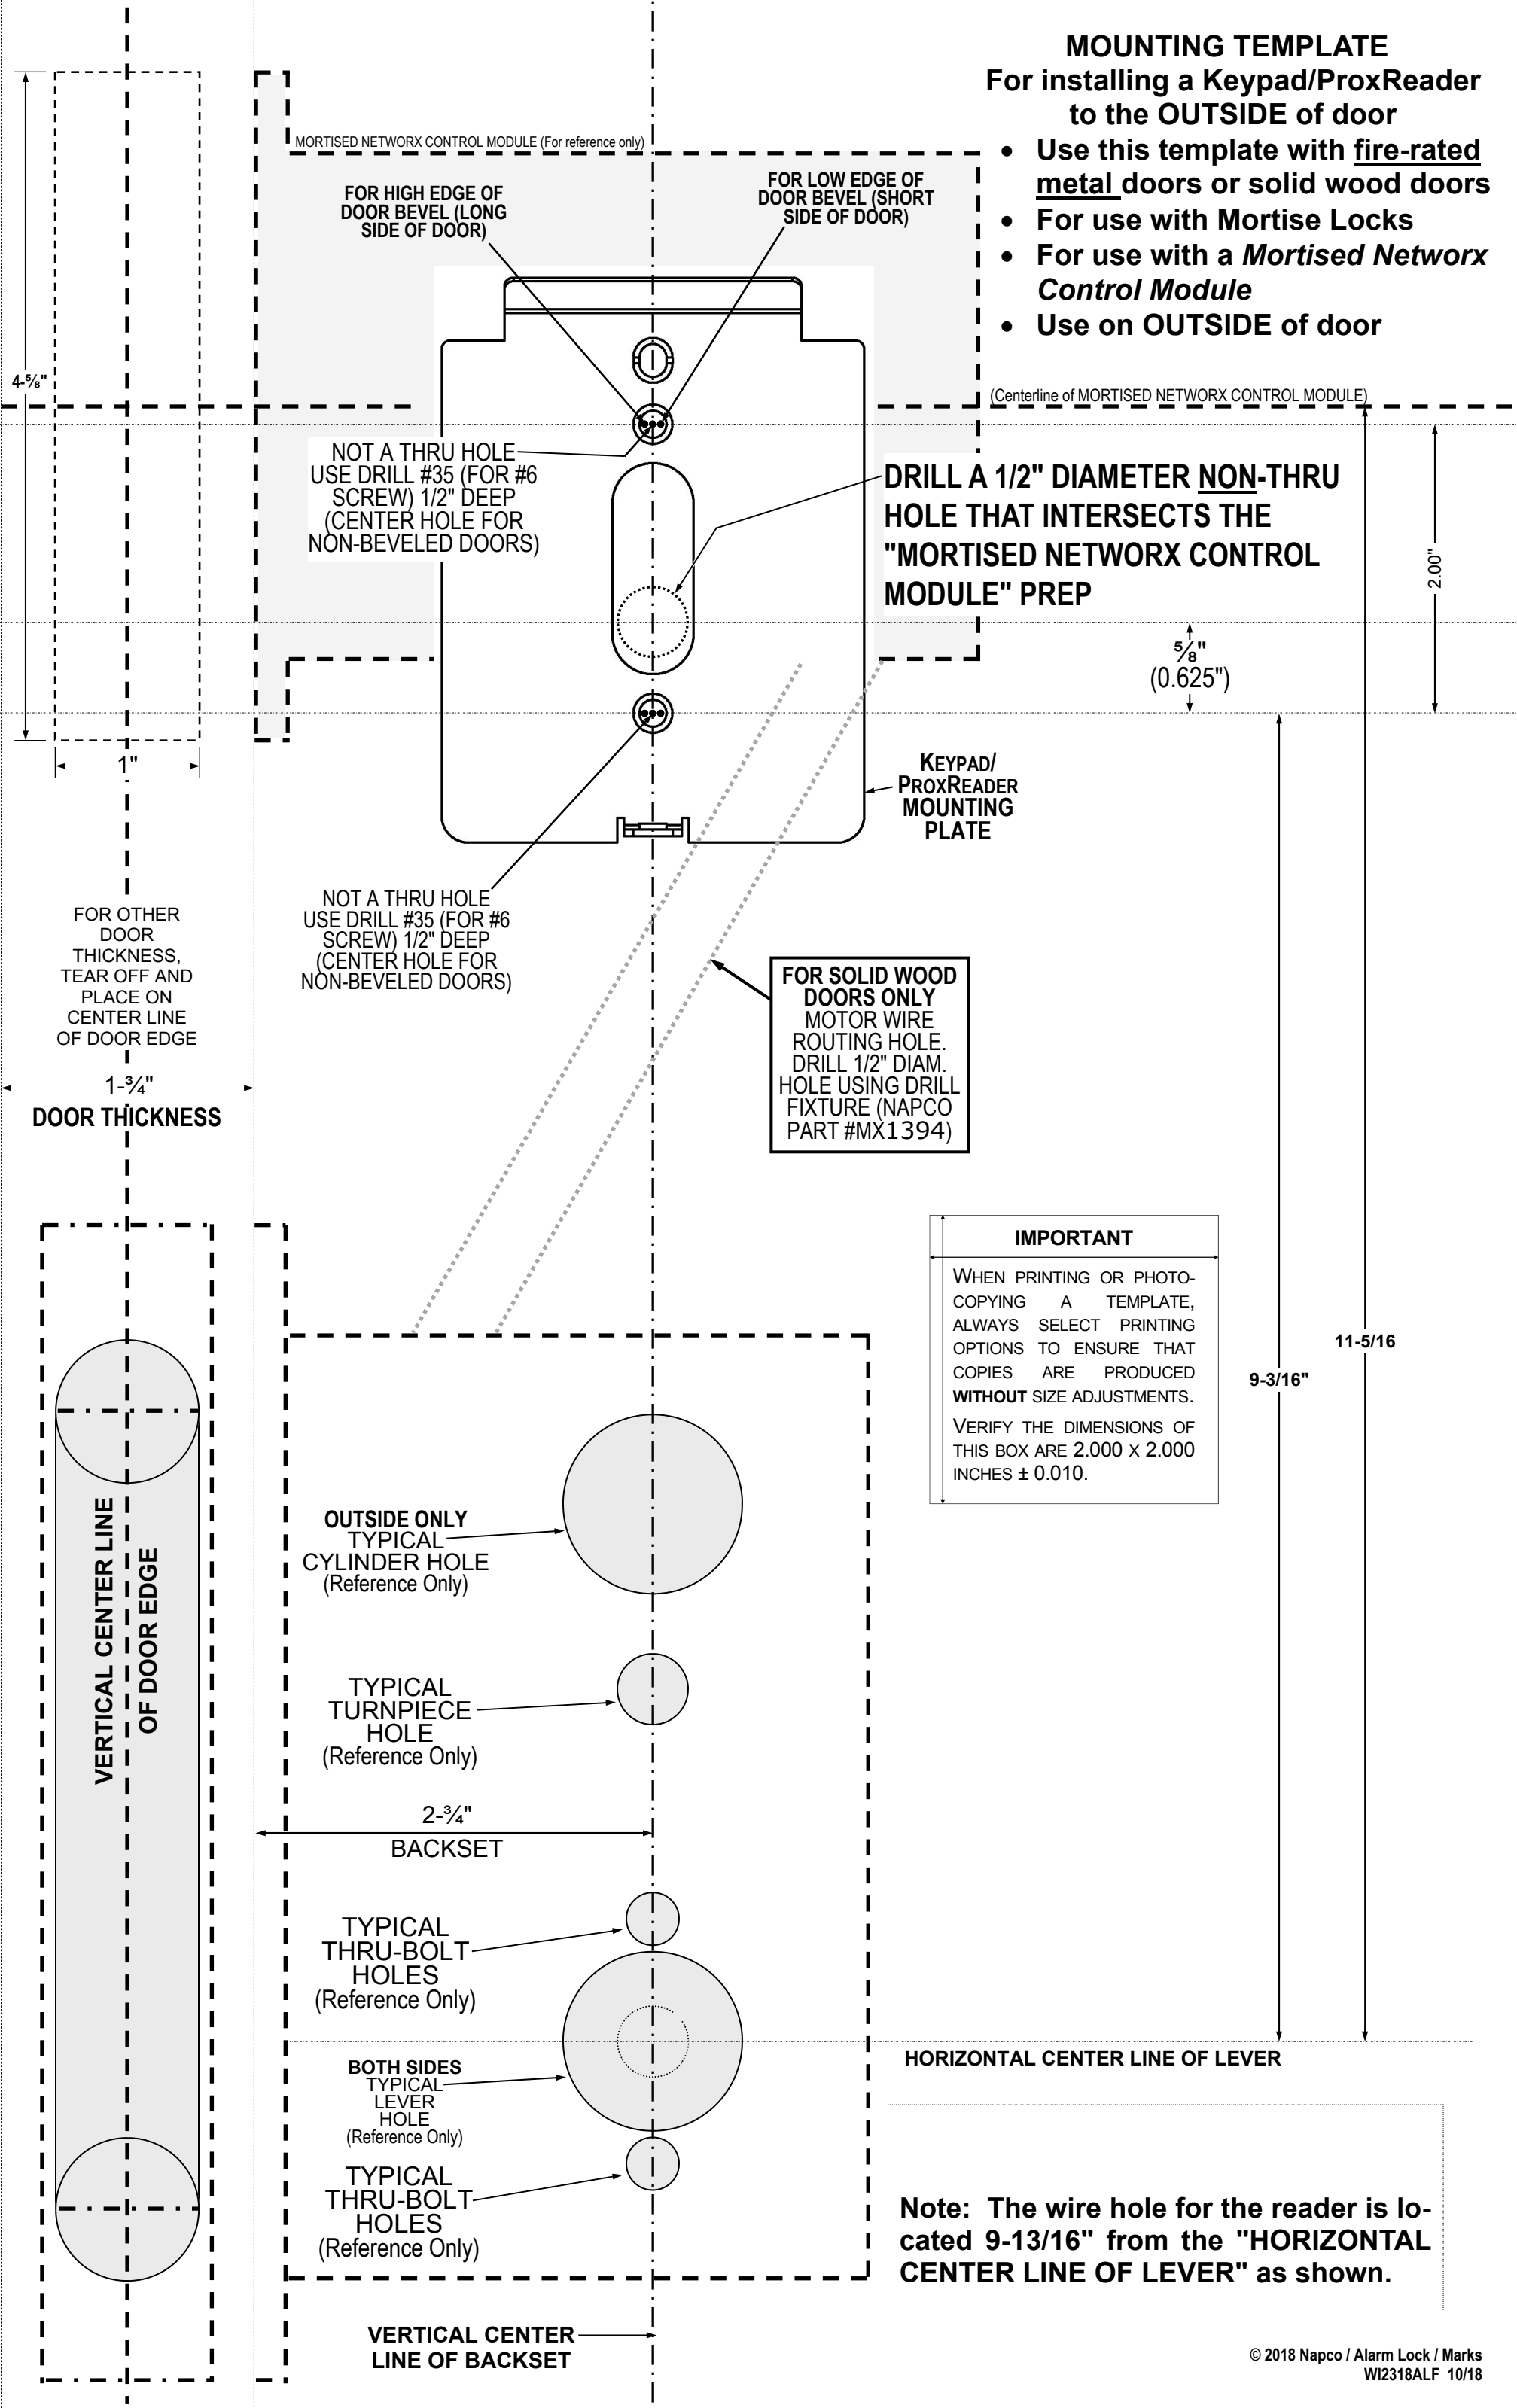

MOUNTING TEMPLATE
For installing a Keypad/ProxReader
to the OUTSIDE of door

- Use this template with fire-rated metal doors or solid wood doors
- For use with Mortise Locks
- For use with a *Mortised Networkx Control Module*
- Use on OUTSIDE of door

