

MOUNTING TEMPLATE


For installing an Oval Multi-Tech Proximity Reader to the OUTSIDE of door

- Use this template with solid wood doors only! (For fire-rated metal doors, use template WI2572)
- For use with Mortise Locks
- For use with a *Surface-Mounted*
- *Networx Control Module ("Backbox")*
- Use on OUTSIDE of door

IMPORTANT

WHEN PRINTING OR PHOTOCOPYING A TEMPLATE, ALWAYS SELECT PRINTING OPTIONS TO ENSURE THAT COPIES ARE PRODUCED **WITHOUT** SIZE ADJUSTMENTS.

VERIFY THE DIMENSIONS OF THIS BOX ARE 2.000 X 2.000 INCHES ± 0.010.

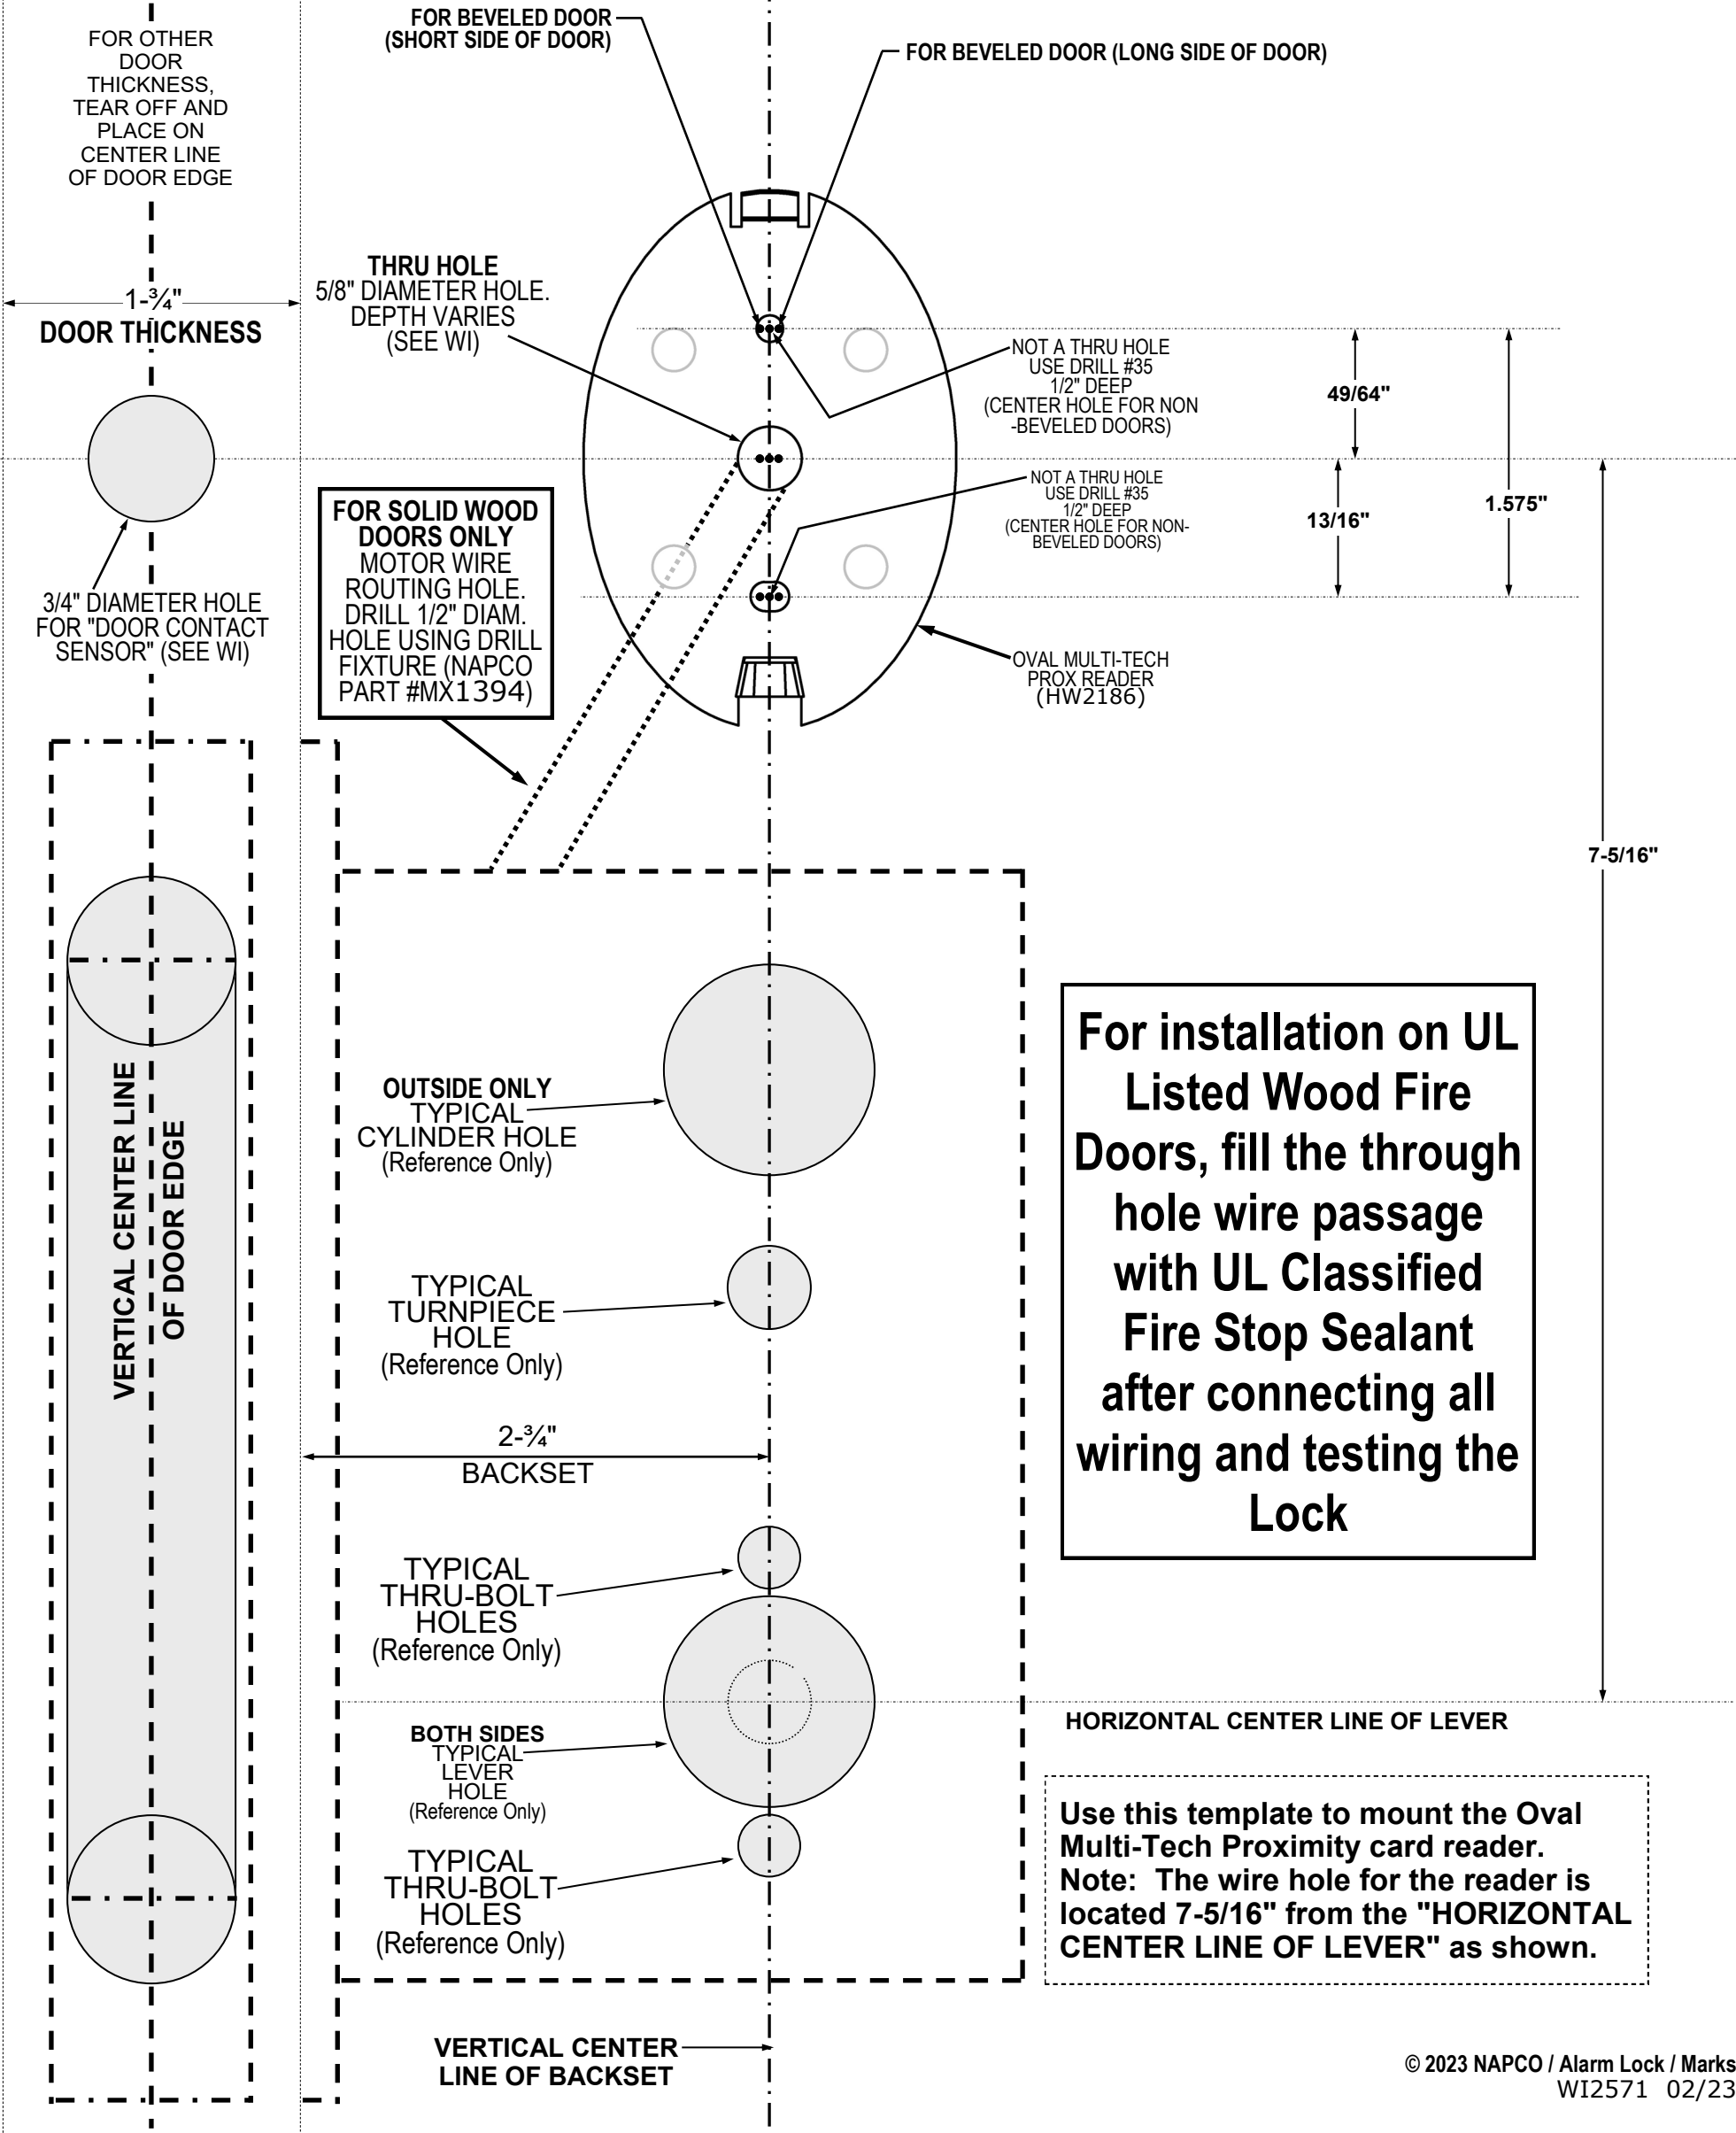

MOUNTING TEMPLATE

For installing an Oval Multi-Tech Proximity Reader to the OUTSIDE of door

- Use this template with solid wood doors only! (For fire-rated metal doors, use template WI2572)
- For use with Mortise Locks
- For use with a *Surface-Mounted Networx Control Module* ("Backbox")
- Use on OUTSIDE of door

IMPORTANT

WHEN PRINTING OR PHOTOCOPYING A TEMPLATE, ALWAYS SELECT PRINTING OPTIONS TO ENSURE THAT COPIES ARE PRODUCED **WITHOUT** SIZE ADJUSTMENTS.

VERIFY THE DIMENSIONS OF THIS BOX ARE 2.000 X 2.000 INCHES ± 0.010.

